


4K Set-top box

IWU 200



Set-top box description

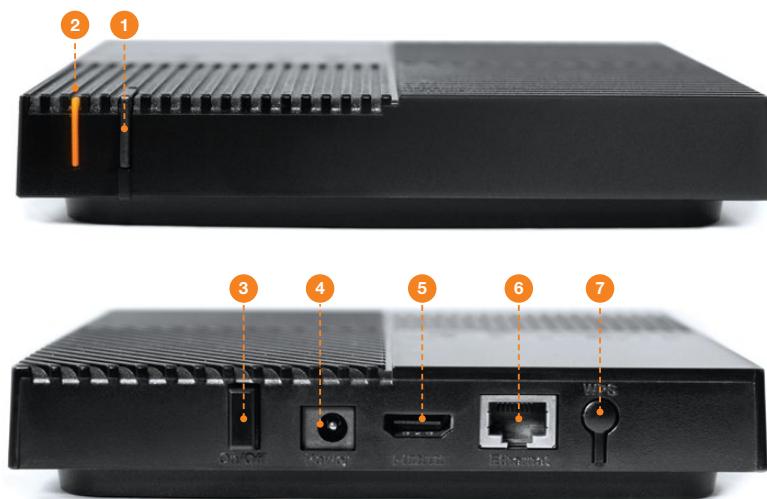

- ① Standby button
- ② Signal LED – the intensity of the light:
 - bright – the decoder is off
 - dimmed – the decoder is on
 - flashing – pairing, updating, error indication

- ③ Power button – On/Off
- ④ Power supply socket
- ⑤ HDMI socket for TV connection
- ⑥ Ethernet socket – for connection to a FunBox
- ⑦ WPS configuration button

Remote control description



- ① List of favourites channels
- ② Video on demand (VOD)
- ③ Recorder menu (PVR)
- ④ Previous screen
- ⑤ Inbox
- ⑥ Previous channel
- ⑦ Channel list selection
- ⑧ TV guide
- ⑨ Information about the current program
- ⑩ Exit

Set-top box connection

1. Connect the set-top box to the TV

using a HDMI® cable.

Turn on the TV and set the source of the signal to the same HDMI. Use the button with the icon  or the one with the SOURCE icon on the remote control.



2. Plug the power supply unit from the kit

into the appropriate socket.

3. Connect to the FunBox and turn on the decoder

Ethernet Cable

– connect the Ethernet cable to the Ethernet port of set-top box. Plug the other end of the using cable into the black ETH socket in the FunBox.

Then turn on the set-top box with the ON/OFF switch.



Wi-Fi®

– turn on the set-top box by pressing the ON/OFF button.



4. Follow the on-screen instructions

(in Polish)



For more information, please visit
www.orange.pl/pomoc

Wi-Fi® is a registered trademark of the Wi-Fi Alliance. HDMI, HDMI High Definition Multimedia Interface and the HDMI logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio and the double-D symbol are trademarks of Dolby Laboratories.